


AIRPORT DIAGRAM

ATLANTA/ HARTSFIELD - JACKSON ATLANTA INTL (ATL)
AL-26 (FAA) ATLANTA, GEORGIA

ATIS ARR 119.65
DEP 125.55
ATLANTA TOWER
119.1 381.6 (RWY 08L-26R)
125.325 381.6 (RWY 08R-26L)
119.3 381.6 (RWY 09L-27L)
123.85 381.6 (RWY 09L-27R)
119.5 381.6 (RWY 10-28)
GND CON
121.9 381.6 (RWY 08L-26R, 08R-26L)
121.75 381.6 (RWY 09L-27R, 09R-27L)
121.65 381.6 (RWY 10-28)
CLNC DEL
118.1

D
LANDING AIRCRAFT CAN EXPECT TO REMAIN ON TOWER FREQUENCY UNTIL SPECIFICALLY INSTRUCTED TO CONTACT GROUND CONTROL. CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES. AIRTRAN HANGAR
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

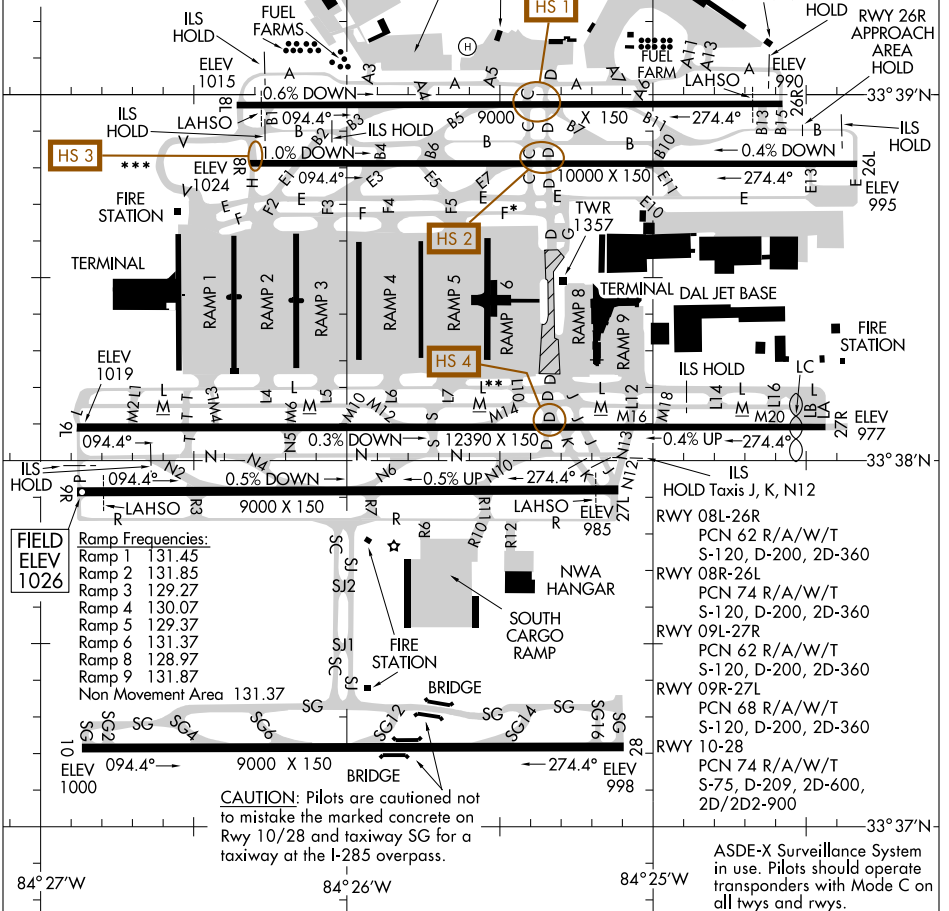

SE-4, 31 MAY 2012 to 28 JUN 2012

SE-4, 31 MAY 2012 to 28 JUN 2012

AIRPORT DIAGRAM

ATLANTA, GEORGIA
ATLANTA/ HARTSFIELD - JACKSON ATLANTA INTL (ATL)