 


# AIRPORT DIAGRAM

BALTIMORE/WASHINGTON INTL THURGOOD MARSHALL (BWI)  
AL-804 (FAA) BALTIMORE, MARYLAND

ATIS  
115.1 127.8  
BALTIMORE TOWER  
119.4 257.8  
GND CON  
121.9  
CLNC DEL  
118.05

**D**



324  $\Delta$   
39°12'N

RWY 04-22  
PCN 65 F/A/W/T  
S-100, D-220, 2D-500, 2D/2D2-728


RWY 10-28  
PCN 110 F/A/W/T  
S-100, D-220, 2D-500, 2D/2D2-790

RWY 15L-33R  
PCN 26 F/A/W/T  
S-30, D-60

RWY 15R-33L  
PCN 100 F/A/W/T  
S-100, D-220, 2D-500, 2D/2D2-790

NE-3, 31 MAY 2012 to 28 JUN 2012

NE-3, 31 MAY 2012 to 28 JUN 2012

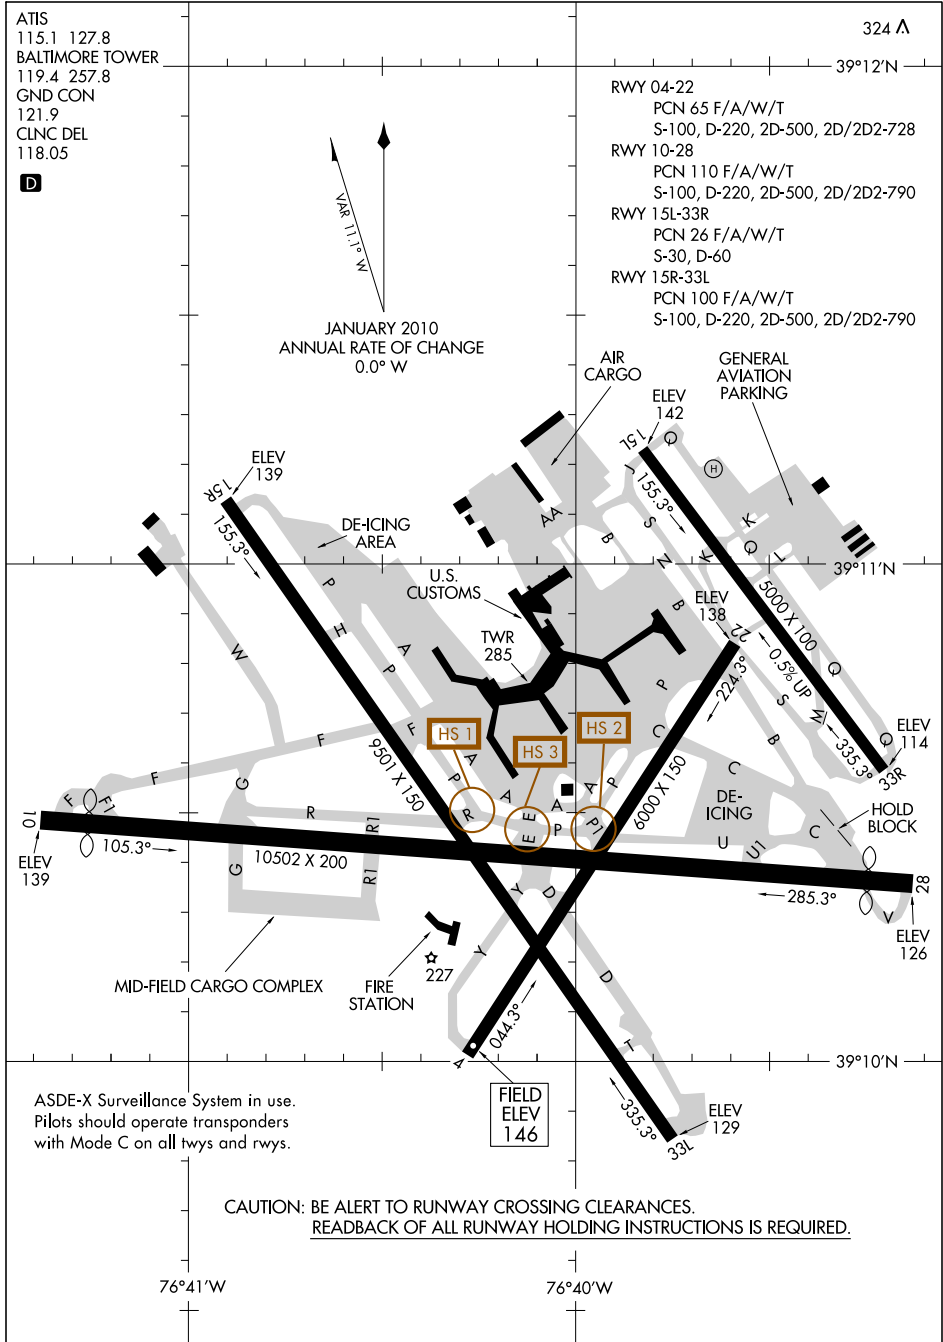

ASDE-X Surveillance System in use.  
Pilots should operate transponders  
with Mode C on all twys and rwys.

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.  
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

# AIRPORT DIAGRAM

BALTIMORE, MARYLAND  
BALTIMORE/WASHINGTON INTL THURGOOD MARSHALL (BWI)