LOC I-VCV	APP CRS	Rwy ldg	15050
108.75	166°	TDZE	2825
		Apt Elev	2885

ILS or LOC RWY 17
SOUTHERN CALIFORNIA LOGISTICS (VCV)

When local altimeter setting not received, use Edwards AFB altimeter setting and increase all DA and MDA 160 feet. Increase all visibilities ½ mile. DME from VCV VOR/DME. Simultaneous reception of I-VCV and VCV DME required.

MISSED APPROACH: Climb to 3500, then climbing right turn to 6000 via heading 300° and VCV VOR/DME R-269 to ETHER INT and hold.

ATIS ★	JOSHUA APP CON	VICTORVILLE TOWER ★	GND CON
135.475	124.55 363.0	118.35 (L) 282.225	124.45

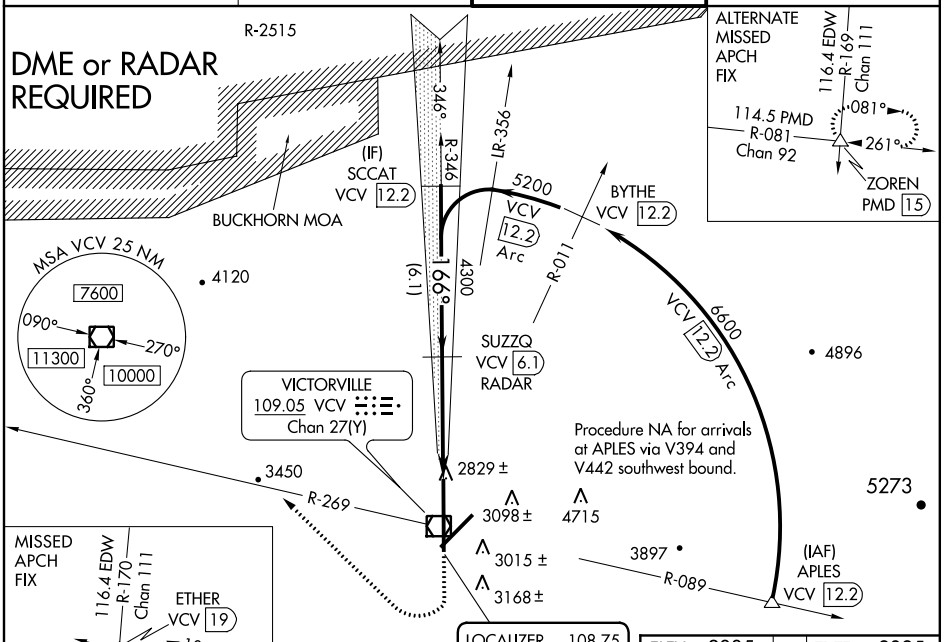

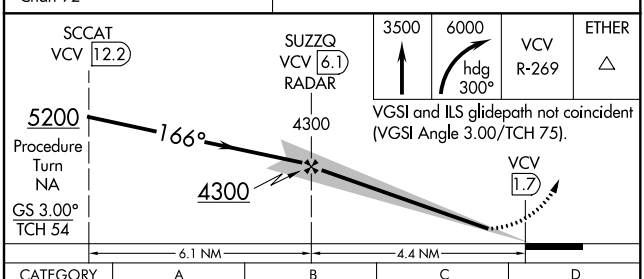

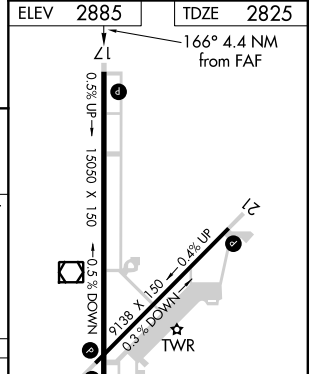

CATEGORY	A	B	C	D
S-ILS 17	3025/40 200 (200-¾)			
S-LOC 17	3080/50 255 (200-1)			
CIRCLING	3360-1 475 (500-1)	3420-1 535 (600-1)	3420-1½ 535 (600-1½)	3580-2¼ 695 (700-2¼)

FAF to MAP 4.4 NM					
Knots	60	90	120	150	180
Min:Sec	4:24	2:56	2:12	1:46	1:28

SW-3, 23 JUN 2016 to 21 JUL 2016

SW-3, 23 JUN 2016 to 21 JUL 2016

WAAS CH 77523 W17A	APP CRS 166°	Rwy ldg 15050 TDZE 2825 Apt Elev 2885

RNAV (GPS) RWY 17
SOUTHERN CALIFORNIA LOGISTICS (VCV)

For uncompensated Baro-VNAV systems, LNAV/VNAV NA below -20°C (-4°F) or above 43°C (109°F).
DME/DME RNP-0.3 NA.
When local altimeter setting not received, use Edwards AFB altimeter setting and increase all DA and MDA 160 feet. Increase all visibilities ¾ mile.
VDP and Baro-VNAV NA when using Edwards AFB altimeter setting.

MISSED APPROACH: Climb to 6000 direct SPERG and via 257° track to RLONG and via 294° track to ETHER and hold.

ATIS ★	JOSHUA APP CON	VICTORVILLE TOWER ★	GND CON
135.475	124.55 363.0	118.35 (L) 282.225	124.45

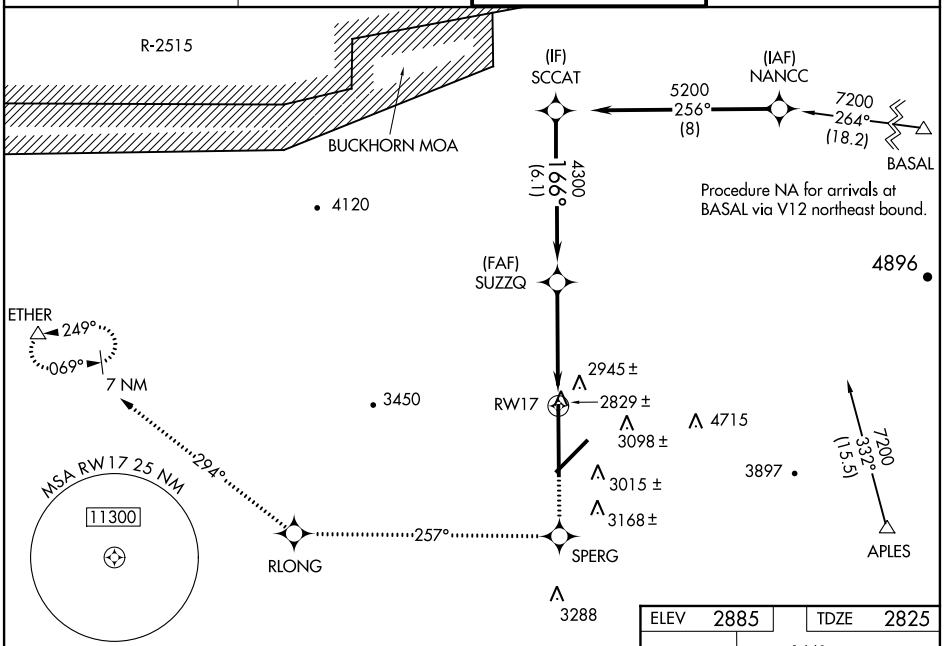

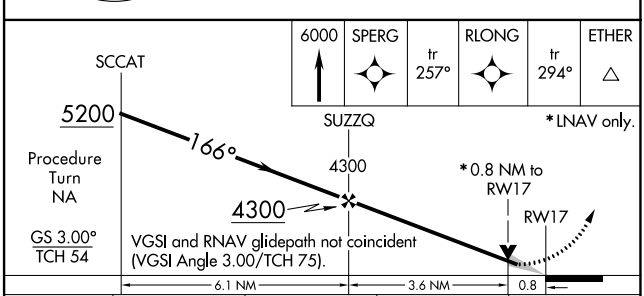

CATEGORY	A	B	C	D
LPV DA	3075/40 250 (200-¾)			
LNAV/VNAV DA	3240-1½ 415 (400-1½)			
LNAV MDA	3140/50 315 (300-1)			
CIRCLING	3360-1 475 (500-1)	3420-1 535 (600-1)	3420-1½ 535 (600-1½)	3580-2¼ 695 (700-2¼)

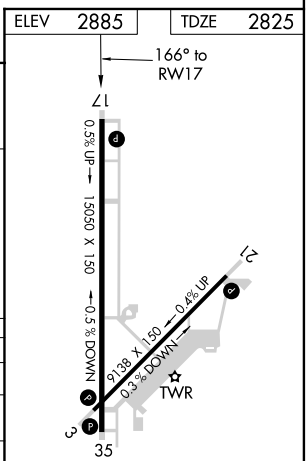

REIL Rwys 17 and 35
HIRL Rwys 3-21 and 17-35 (L)

SW-3, 23 JUN 2016 to 21 JUL 2016

VOR/DME VCV 109.05 Chan 27(Y)	APP CRS 170°	Rwy ldg 15050 TDZE 2825 Apt Elev 2885

VOR/DME RWY 17
SOUTHERN CALIFORNIA LOGISTICS (VCV)

When local altimeter setting not received, use Edwards AFB altimeter setting and increase all MDA 160 feet. Increase all visibilities ½ mile.

MISSED APPROACH: Climb to 3500, then climbing right turn to 6000 via heading 300° and VCV R-269 to ETHER INT and hold.

ATIS ★	JOSHUA APP CON	VICTORVILLE TOWER ★	GND CON
135.475	124.55 363.0	118.35 (L) 282.225	124.45

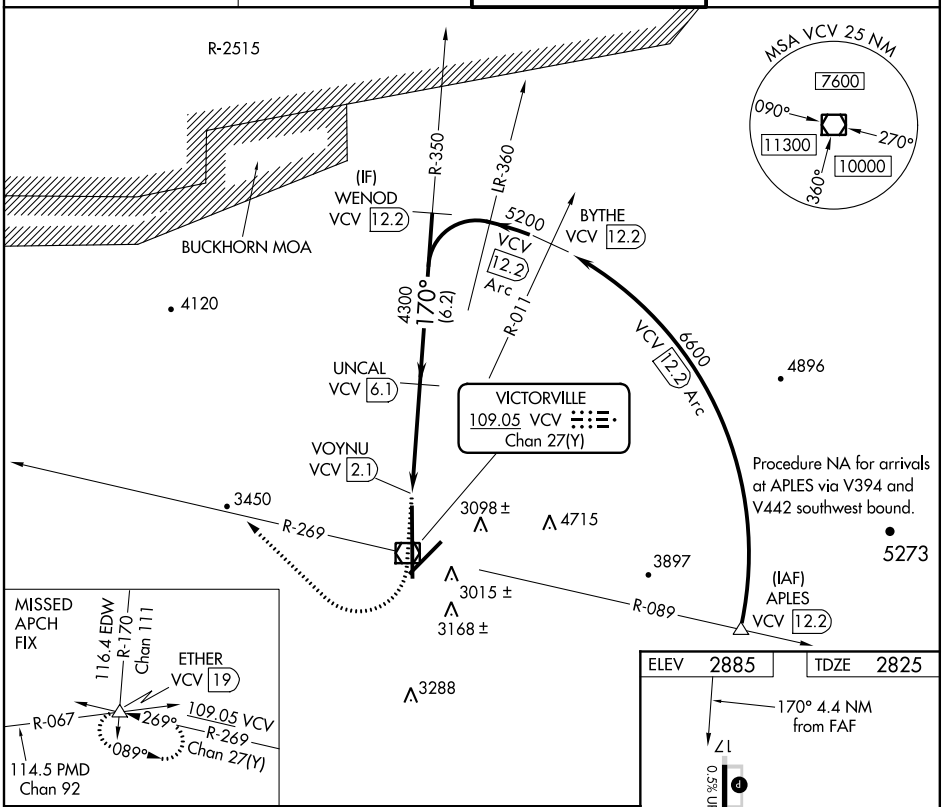

CATEGORY	A	B	C	D
S-17	3200/50 375 (400-1)			3200/60 375 (400-1¼)
CIRCLING	3360-1 475 (500-1)	3420-1 535 (600-1)	3420-1½ 535 (600-1½)	3580-2¼ 695 (700-2¼)

REIL Rwys 17 and 35
HIRL Rwys 3-21 and 17-35 (L)

SW-3, 23 JUN 2016 to 21 JUL 2016

SW-3, 23 JUN 2016 to 21 JUL 2016