VOR/DME SBJ	APP CRS	Rwy Idg	1923
112.9	061°	TDZE	101
Chan 76		Apt Elev	106

VOR RWY 8
SOMERSET (SMQ)

Helicopter visibility reduction below 1 SM NA. Procedure NA at night. When local altimeter setting not received, use Morristown altimeter setting and increase all MDA 60 feet.

MISSED APPROACH: Climbing left turn to 2100 direct SBJ VOR/DME and hold.

ASOS	NEW YORK APP CON	UNICOM	
120.6	132.8 379.9	123.0 (CTAF)	118.325 L

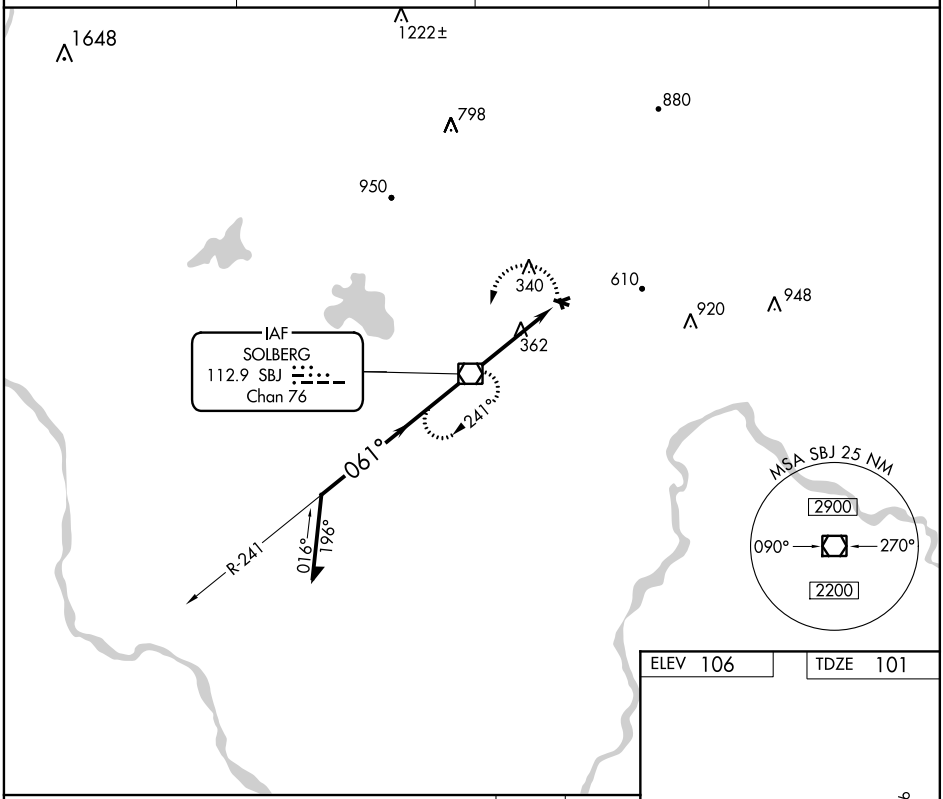

ELEV 106	TDZE 101

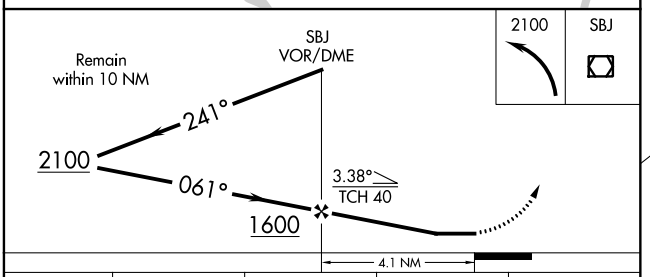

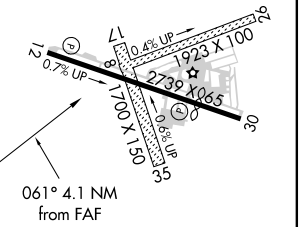

CATEGORY	A	B	C	D
S-8	700-1 599 (600-1)		NA	
C CIRCLING	700-1 594 (600-1)	960-1¼ 854 (900-1¼)	NA	

REIL Rwys 12 and 30 L
MIRL Rwy 12-30 L

FAF to MAP 4.1 NM					
Knots	60	90	120	150	180
Min:Sec	4:06	2:44	2:03	1:38	1:22

NE-2, 09 SEP 2021 to 07 OCT 2021
NE-2, 09 SEP 2021 to 07 OCT 2021